L1031/L1032

操作指南 | Setup Guide

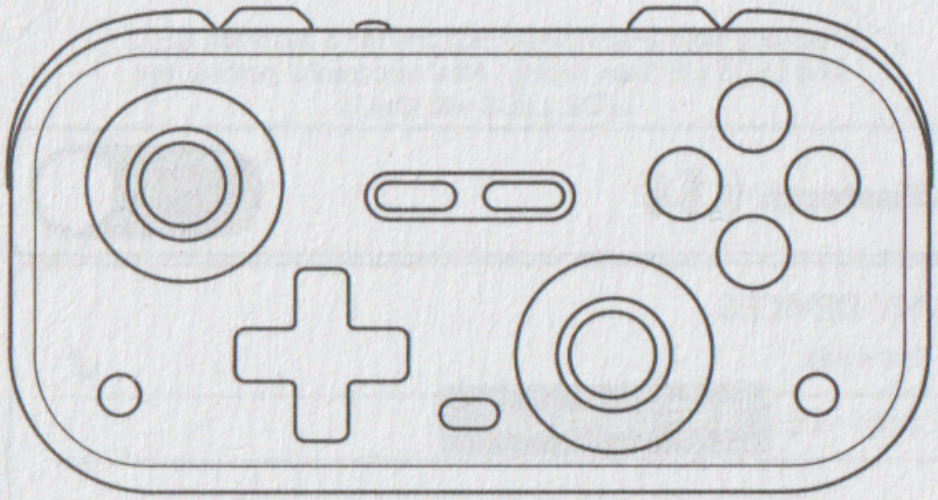

口袋手柄PRO

IINE Palm-Sized Retro Chronos Controller

产品图片仅供参考

Pictures above for reference only

C 中文说明书

Manual

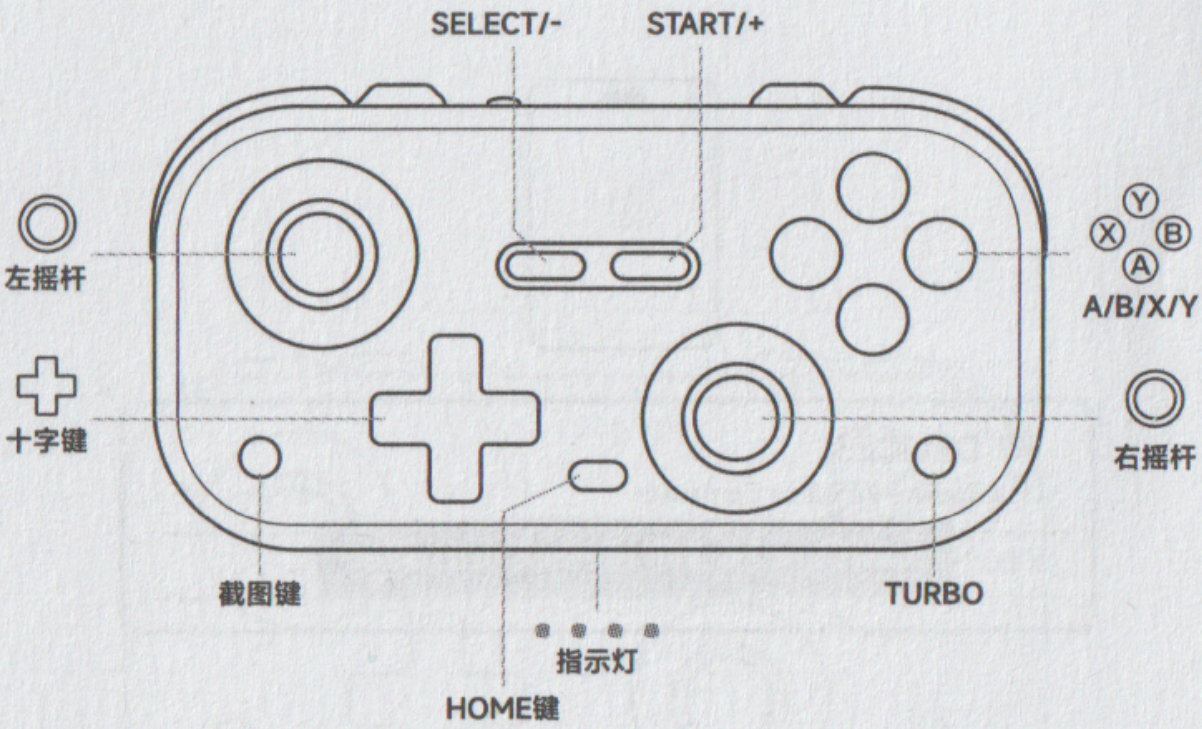
SELECT/-
START/+
左摇杆
十字键
截图键
HOME键
指示灯
TURBO
A/B/X/Y
右摇杆

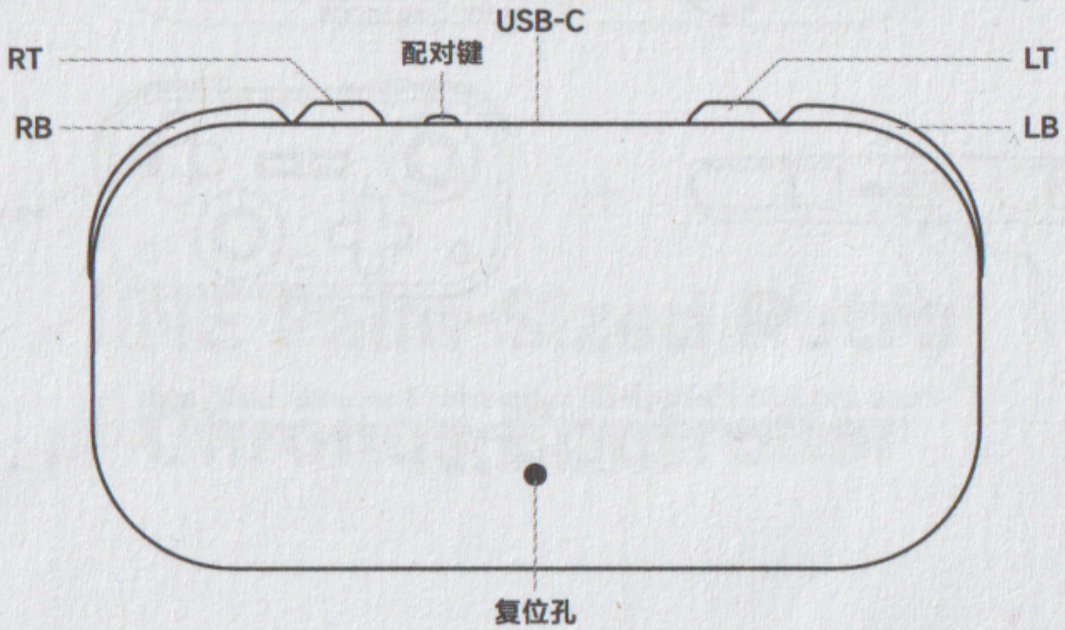
USB-C
配对键
RT
RB
LT
LB
复位孔

1

PC - 无线连接



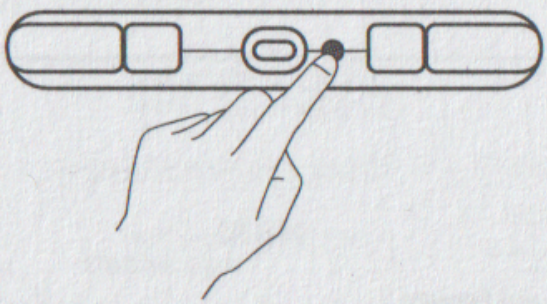

打开电脑蓝牙连接界面，按下[配对键]3秒，
LED1-2同时快闪后松手，配对成功后LED2常亮

PC - 有线连接

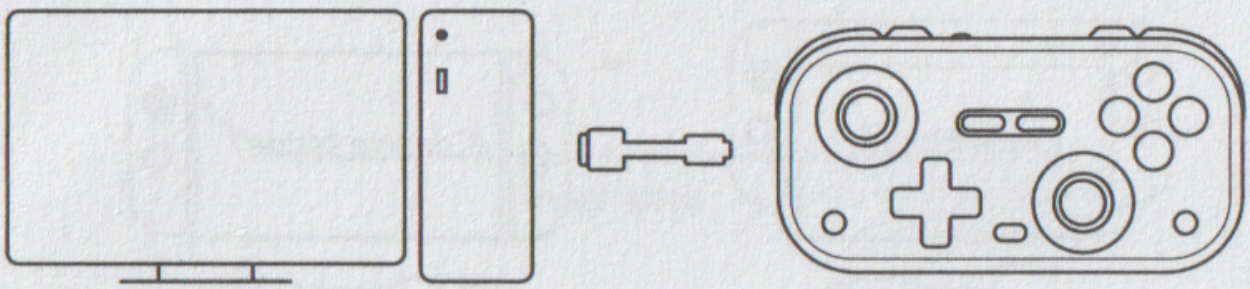

用附带的Type-C数据线连接PC主机，
配对成功后LED1-4常亮

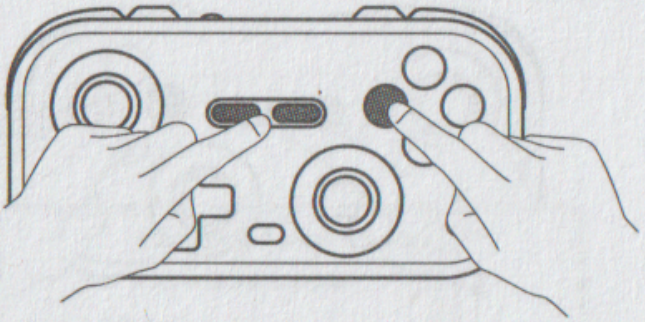

■■■■ XINPUT模式　　■■■■ DINPUT模式

按住[START]+[SELECT]+[X]3S，切换XINPUT/DINPUT模式

2

Switch - 无线连接

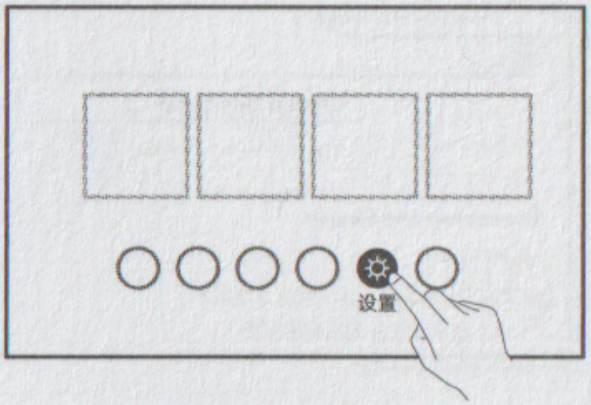

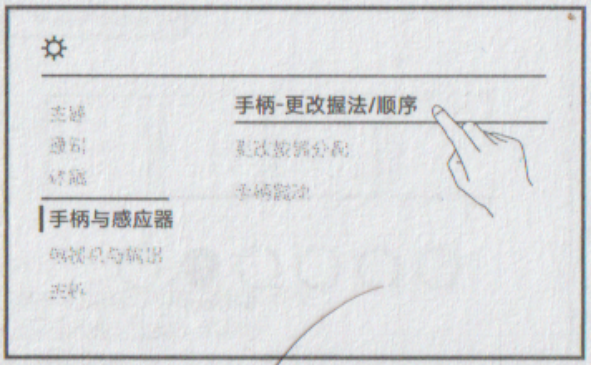

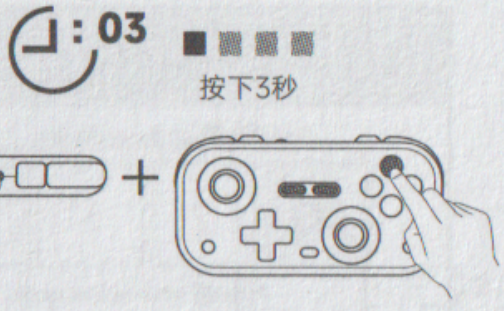

按下[配对键]+[Y]2秒，LED灯快闪，
配对成功后按玩家指示常亮

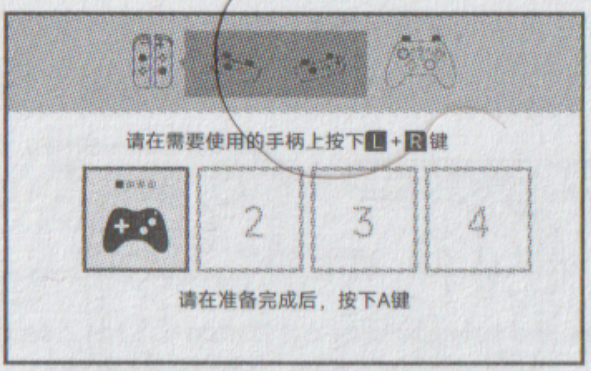

手柄休眠

自助休眠

手动休眠

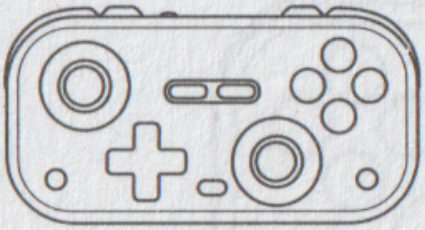

手柄开机后，5分钟内无操作自动休眠

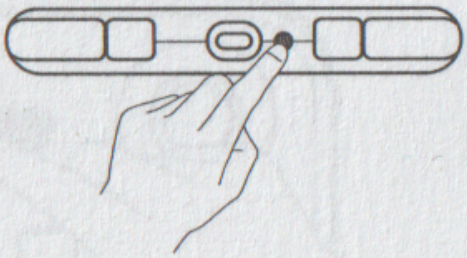

无线模式下，手柄开机时，长按[配对键]5秒断开连接并休眠

手柄回连

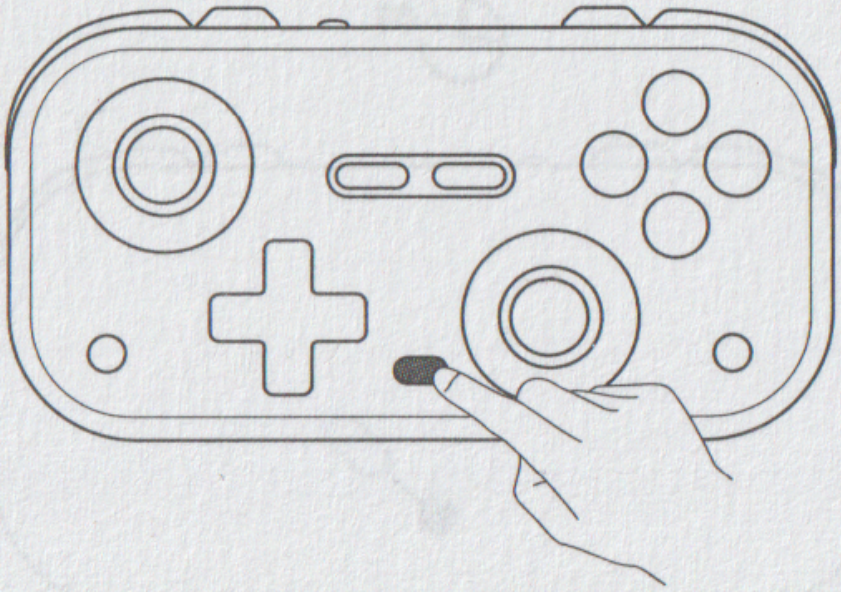

按一下HOME键唤醒手柄，被唤醒后会自动回连最后连接的设备
（支持唤醒Switch主机）

手柄功能设置 - 连发/自动连发设置

手动连发

首次按[Turbo]+任意动作键，设置手动连发

自动连发

再次重复按键操作可将手动连发设置为自动连发

清除连发

第三次重复操作，清除连发。或长按[Turbo]5S

请注意，长按连发键5秒后，连发功能与宏功能将会一起清除。

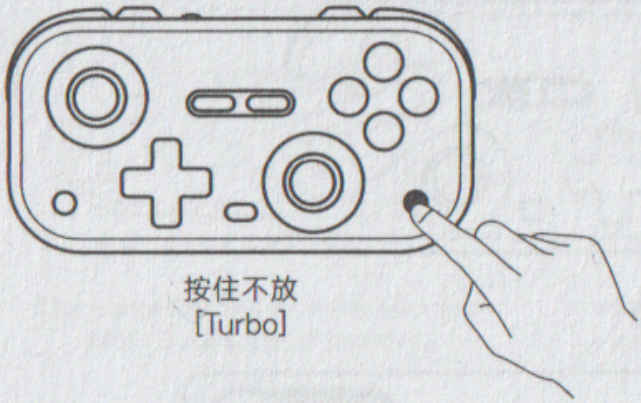

按住不放[Turbo]

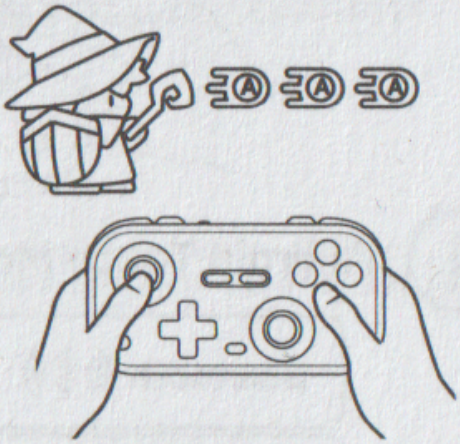

设置连发键，手柄实现自动连击

连发速率调节

[Turbo]+[右摇杆]往右，加快连发速率
[Turbo]+[右摇杆]往左，减慢连发速率

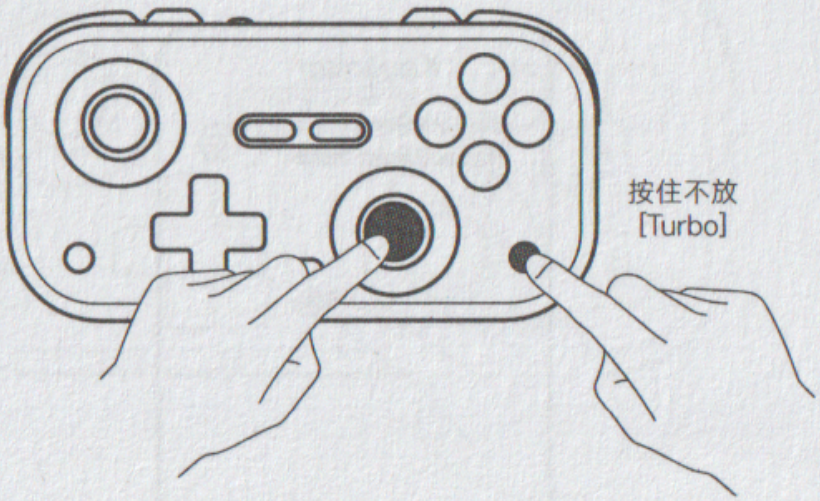

按住不放[Turbo]

一档

每秒连续连发5下

二档

每秒连续连发12下(默认)

三档

每秒连续连发20下

电量显示

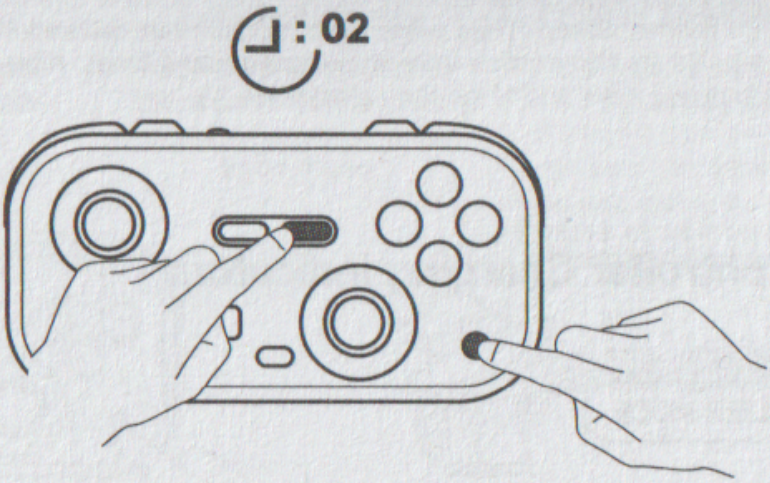

按下[Turbo]+[START]2S查看当前手柄电量

电量指示灯

■ ▒ ▒ ▒	■ ■ ▒ ▒	■ ■ ■ ▒	■ ■ ■ ■
25%以下	26%-50%	51%-75%	76%-100%

手柄震动调节

[Turbo]+[右摇杆]往上，增强震动强度
[Turbo]+[右摇杆]往下，减弱震动强度

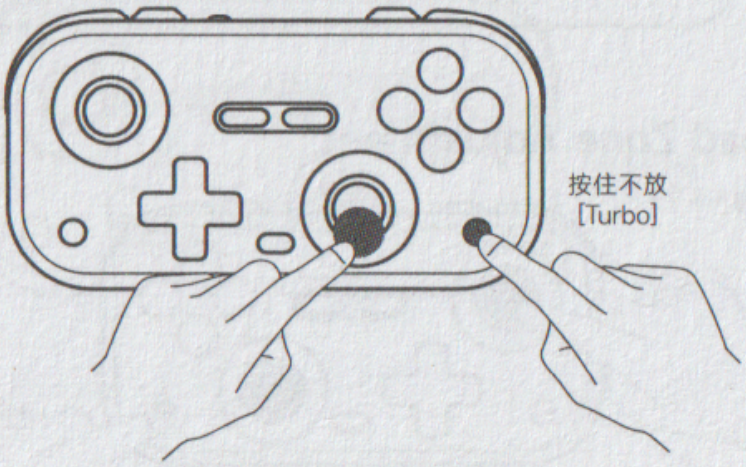

一档	二档	三档
0%	50%	100%

十字键四向八向切换

同时按[SELECT]+[方向键右]2秒，切换十字键四向/八向模式，
成功后震动提示

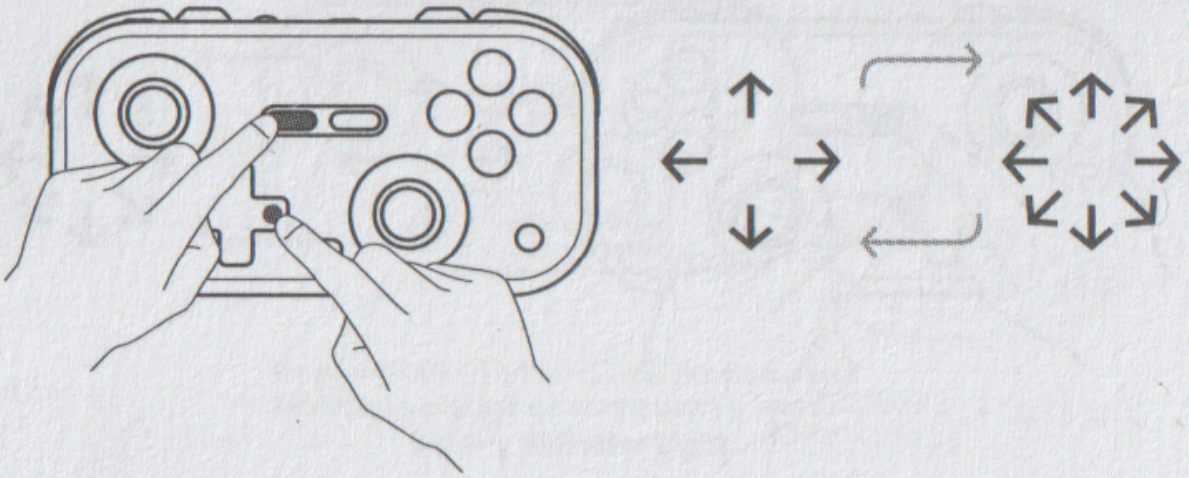

ABXY布局互换

按下[SELECT]+[Turbo]2S切换ABXY按键布局,成功后震动提示

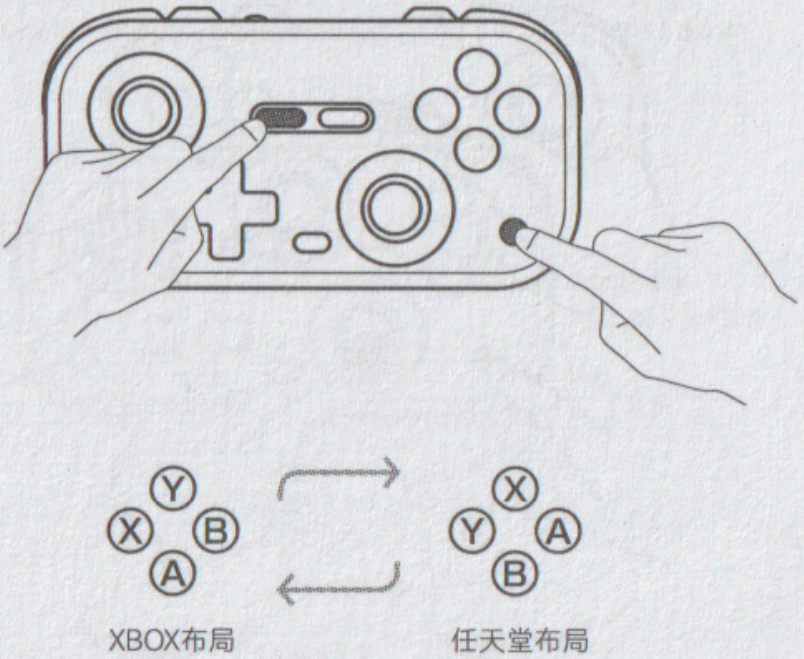

XBOX布局　　任天堂布局

Switch - 有线连接

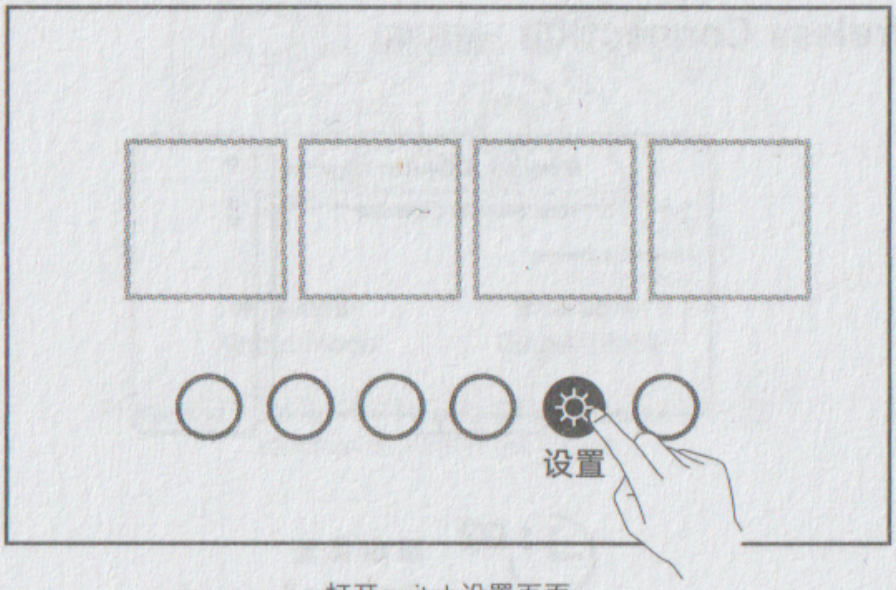

打开switch设置页面

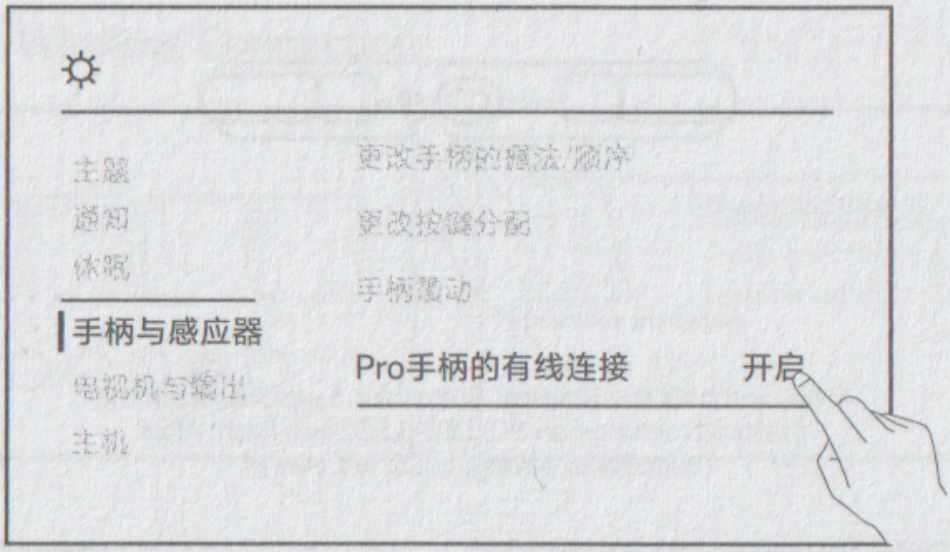

选择[手柄与感应器]选项，开启[Pro手柄的有线连接]

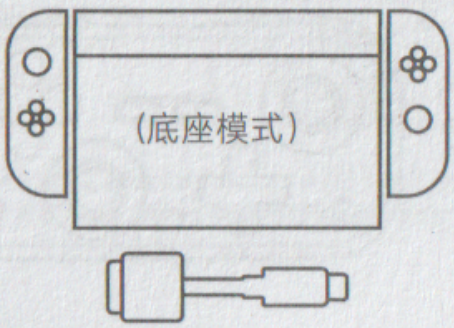

用手柄充电线连接底座与手柄

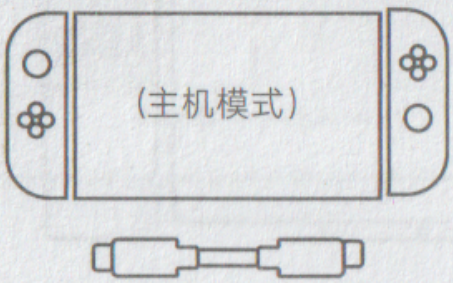

用双C线（自备）连接底座与手柄

3

手机通用模式（DualShock4模拟模式）

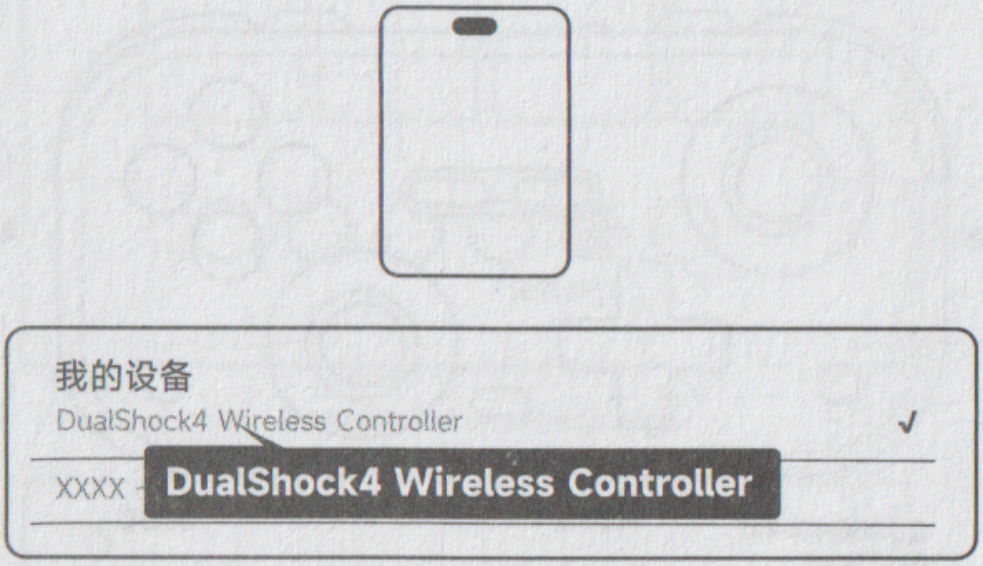



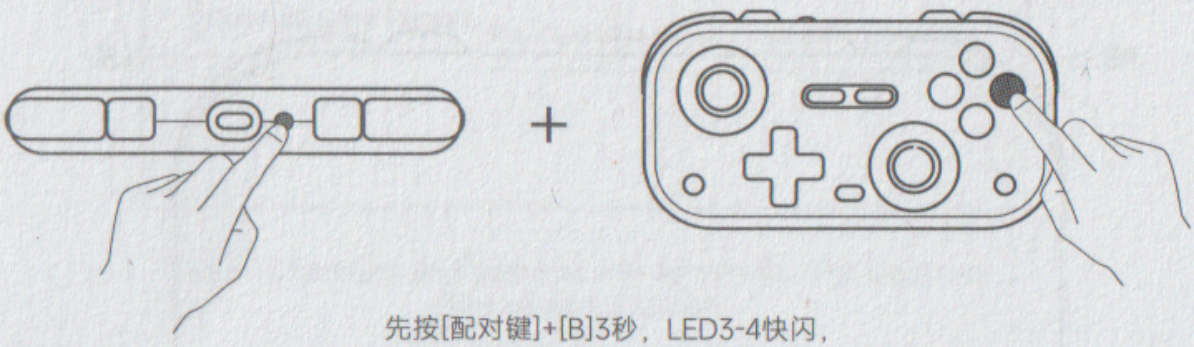

先按[配对键]+[B]3秒，LED3-4快闪，
配对成功后LED3-4常亮

4

安卓连接 - 无线连接



按下3秒

先按[配对键]+[A]3秒,LED2-3快闪，配对成功后LED2-3常亮

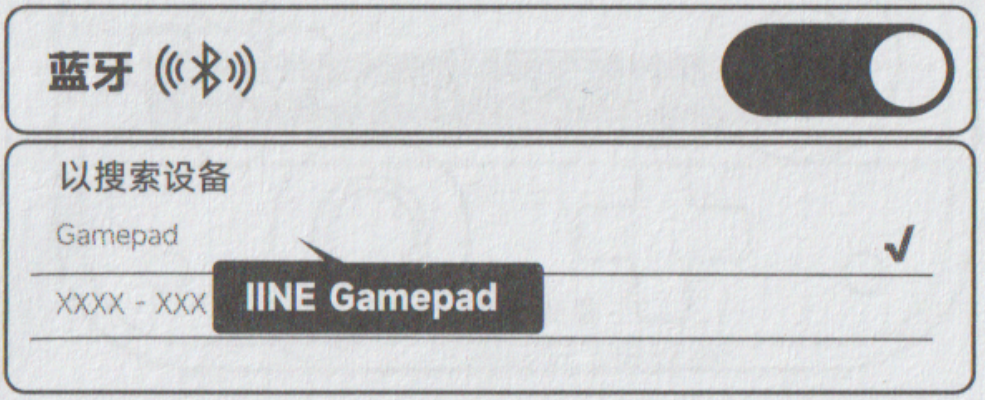

iOS - 无线连接

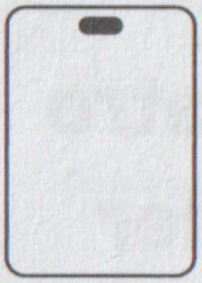

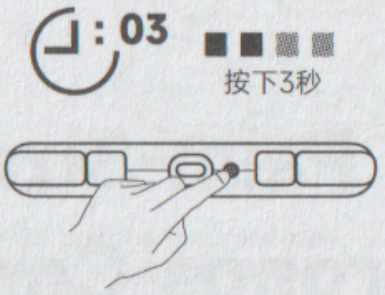

按下3秒

打开手机蓝牙连接界面，按下[配对键]3秒，LED1-2快闪，配对成功后LED1-2常亮

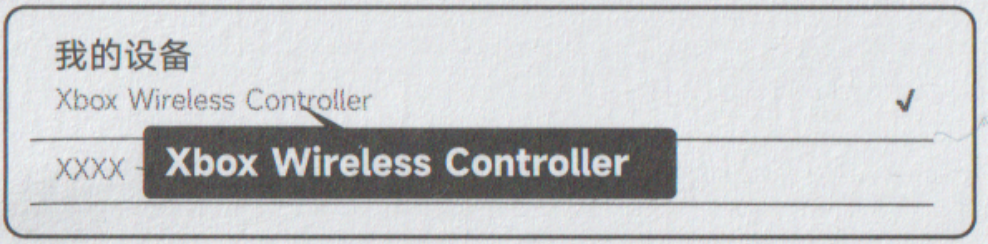

注：安卓手机玩模拟器游戏，建议采用IOS配对方式连接

摇杆与扳机校准

手柄关机状态下，按[Home]+[截图键]使LED1慢闪进入校准模式，再按[A]键开始校准，此时LED2慢闪，摇杆最大圈转3次，完成后按[A]键退出，校准完成。

手柄充电指示

休眠模式

充电状态下
LED1-LED4慢闪

充满状态下
LED1-LED4常亮

连接模式

充电状态下
对应平台指示灯闪烁

充满状态下
对应平台指示灯常亮

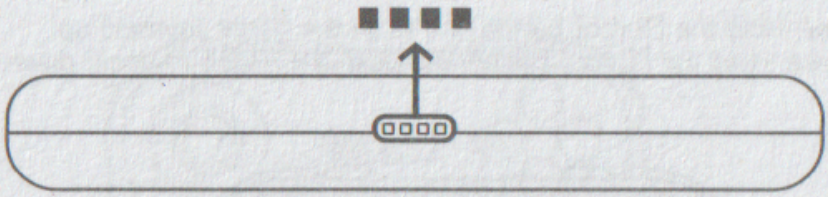

常规死区与0死区调节

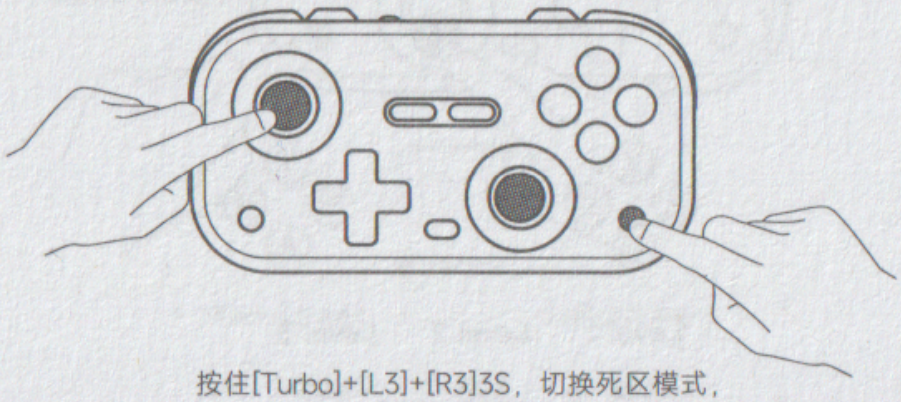

按住[Turbo]+[L3]+[R3]3S，切换死区模式，
成功后震动提示

十字键左摇杆互换

按下[START]+[左摇杆]2S十字键与左摇杆互换，成功后震动提示

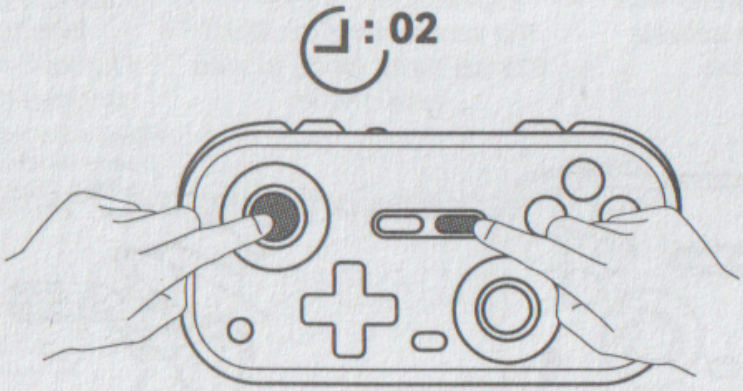

虚拟触控模式

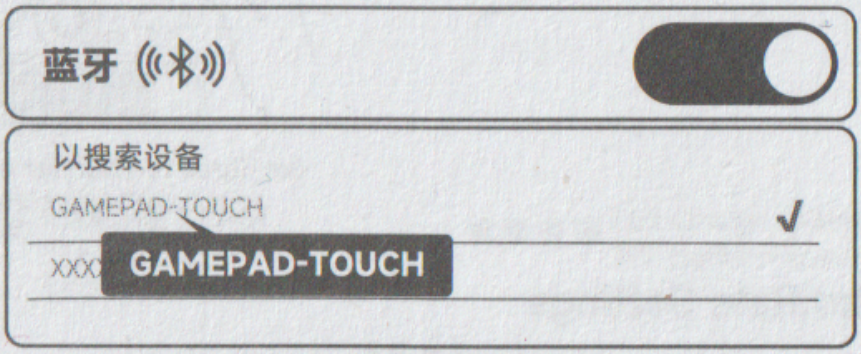

先按[配对键]+[X]3秒,LED1-4快闪，配对成功后LED1-4常亮

在应用商店下载Keylinker，选择安卓直连模式，进入虚拟触控模式（无记忆功能）

恢复出厂设置

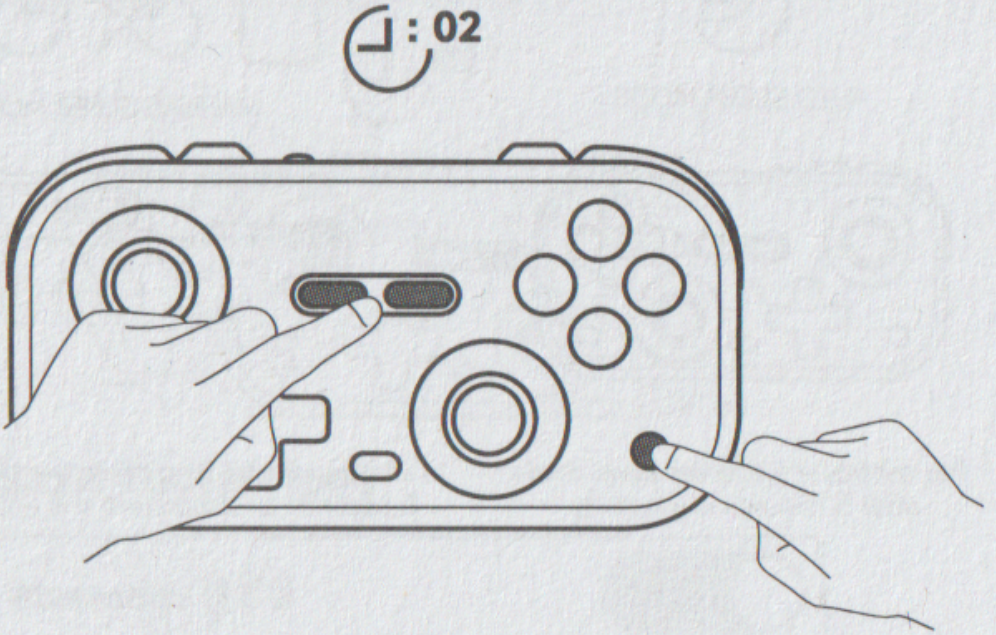

按住[Turbo]+[SELECT]+[START]2S，恢复出场设置，
成功后震动提示

手柄复位

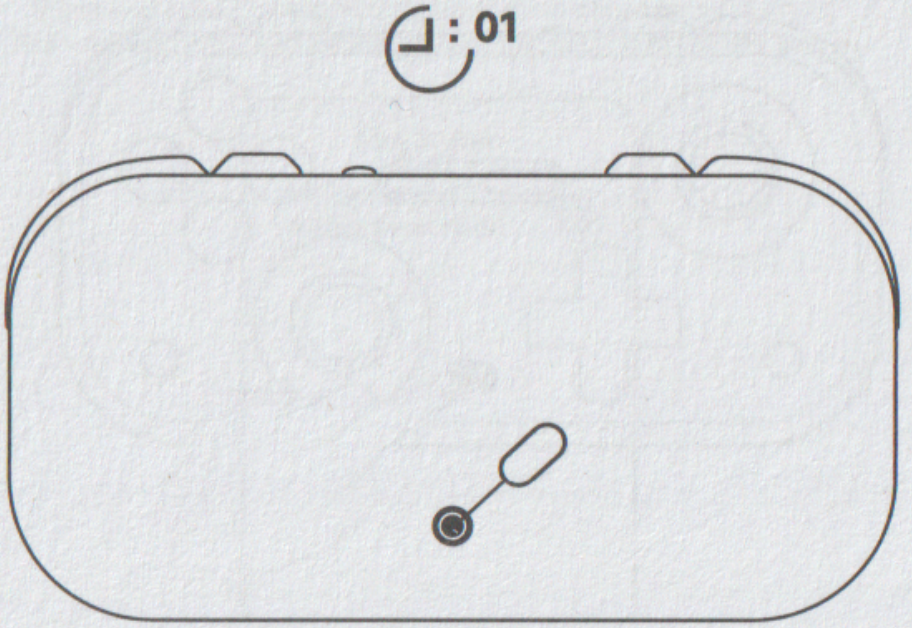

轻戳复位孔进行手柄复位

L1031/L1032

Setup Guide

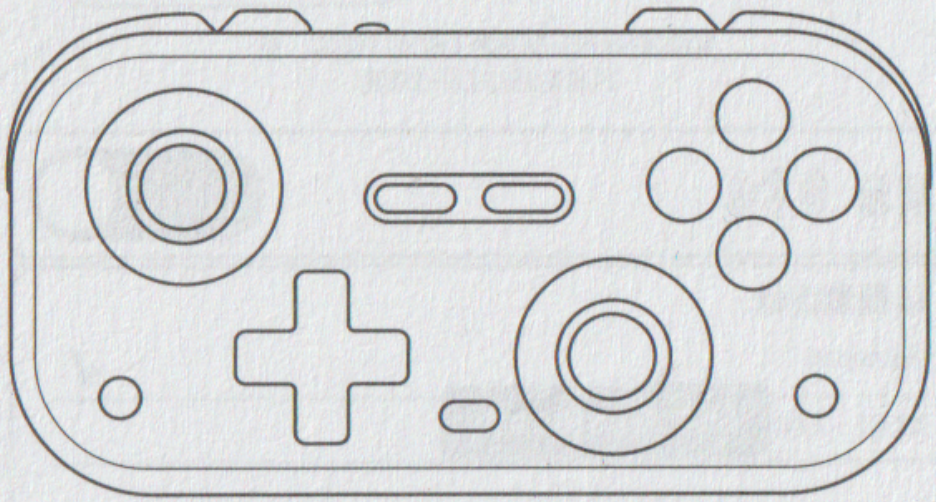

IINE Palm-Sized Retro Chronos Controller

Pictures above for reference only

C 中文说明书

E Manual

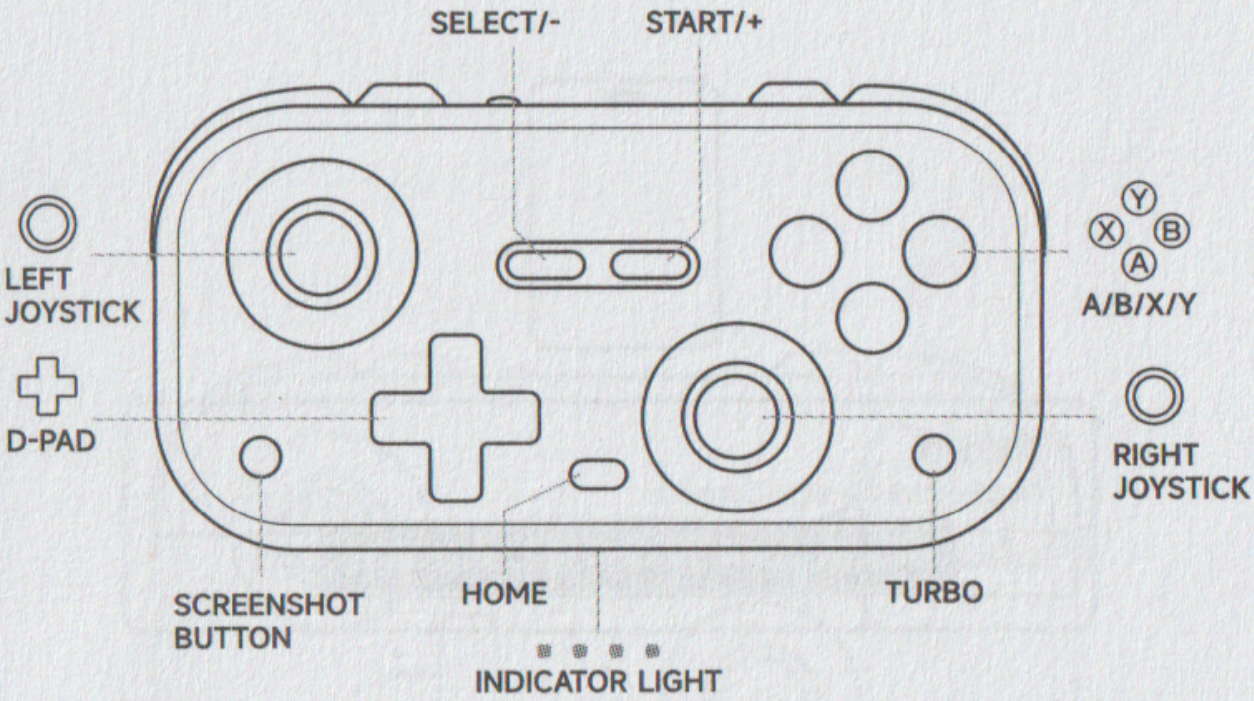
SELECT/-
START/+
LEFT JOYSTICK
D-PAD
A/B/X/Y
RIGHT JOYSTICK
SCREENSHOT BUTTON
HOME
TURBO
INDICATOR LIGHT

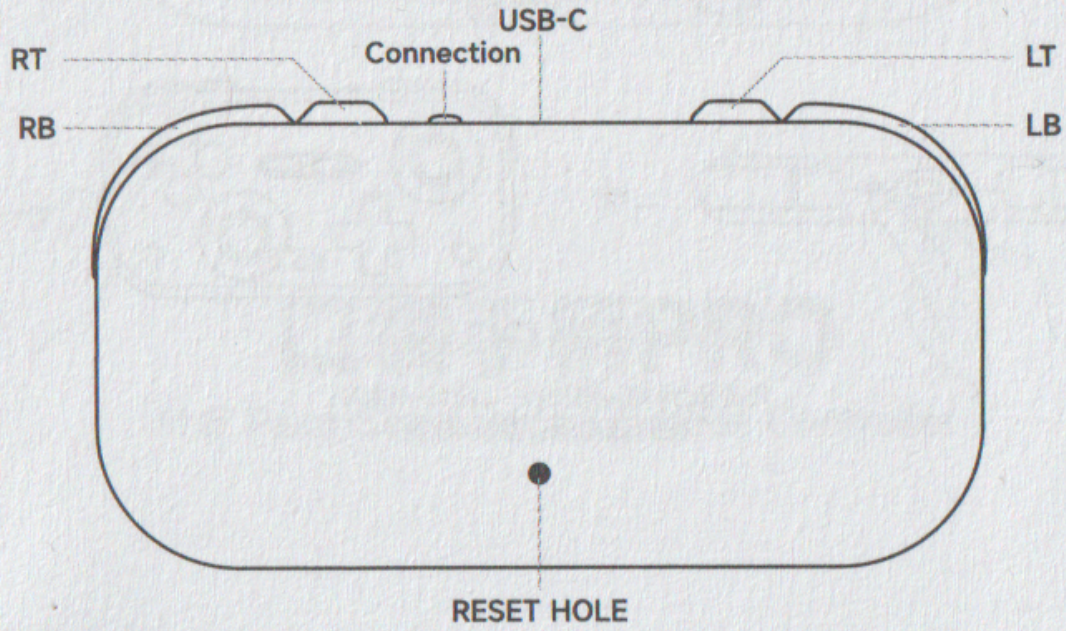
USB-C
Connection
RT
RB
LT
LB
RESET HOLE

1

PC - Wireless Connection

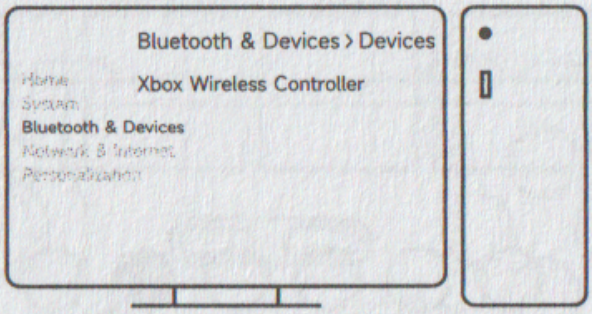



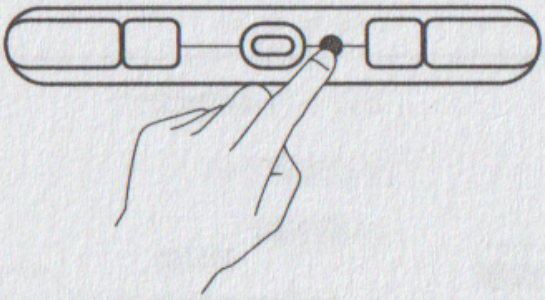

Press and hold the [Pairing] Button for 3 seconds from the bluetooth settings on PC, LED1,LED2 will flash. After successful pairing, LED2 will stay lit.

PC - Wired Connection

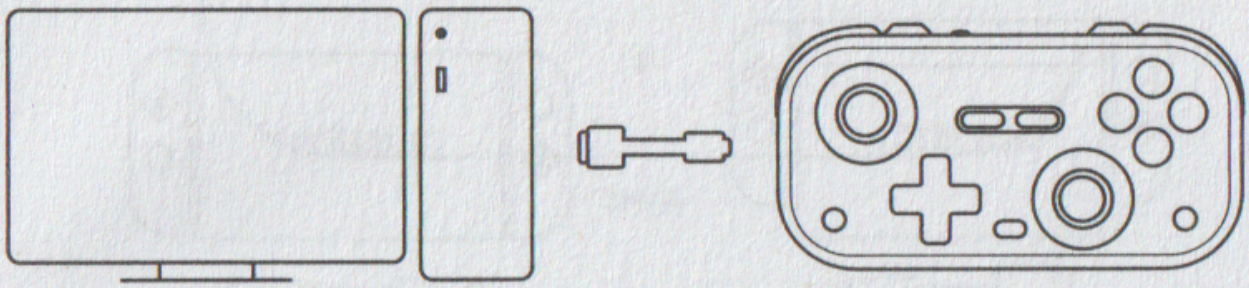

Connect the PC to the controller using the included Type-C cable. After successful pairing, LED1-4 will stay lit.

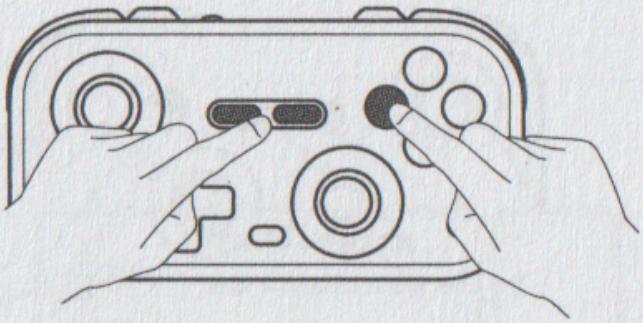

■■■■ Xinput Mode

■■■■ Dinput Mode

Press and hold [START]+[SELECT]+[X] buttons for 3 seconds to switch the mode.

2

Switch - Wireless Connection

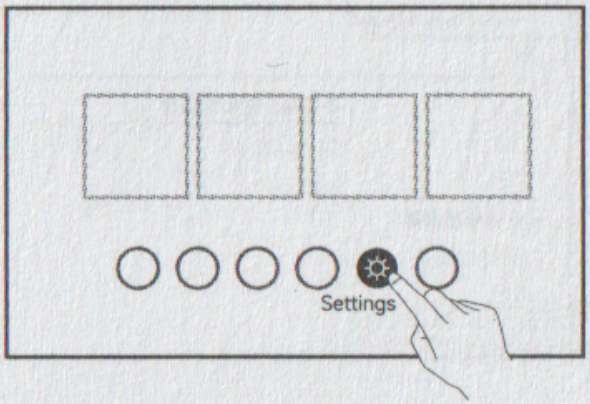

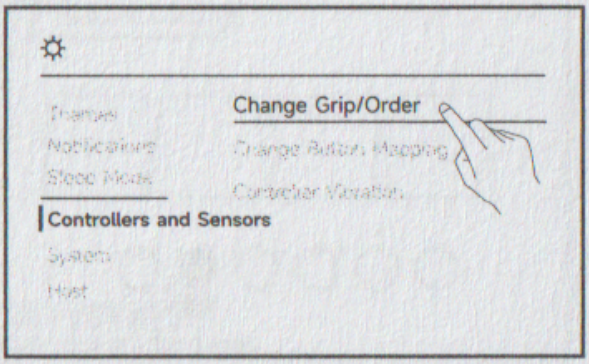

:03 ■■■■

Press for 3 seconds

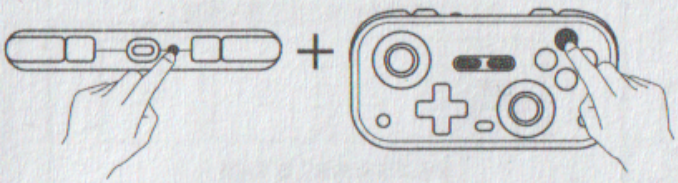

Press and hold the [Pairing] Button+[Y] for 2 seconds, LED will flash. After successful pairing, the LED light will stay lit.

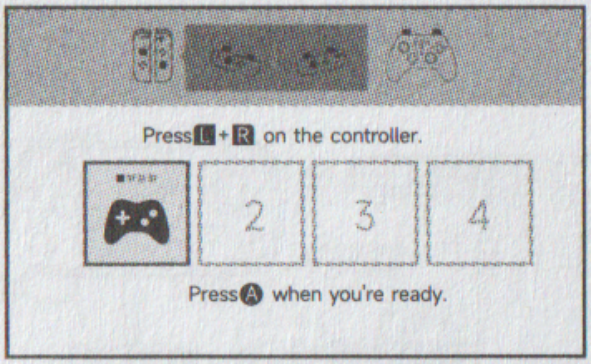

Controller Sleep Mode

AUTO SLEEP MODE

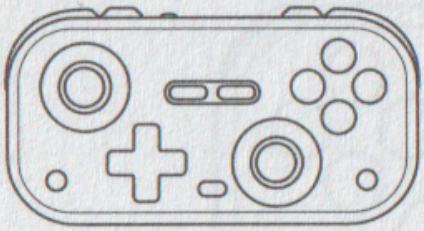

The controller will enter sleep mode after 5 minutes of inactivity.

MANUAL SLEEP MODE

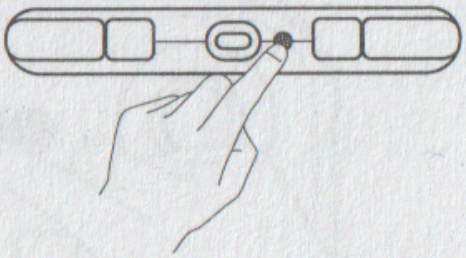

In wireless mode, long press the [Pairing] button for 5 seconds to disconnect and enter sleep mode.

Controller Reconnect

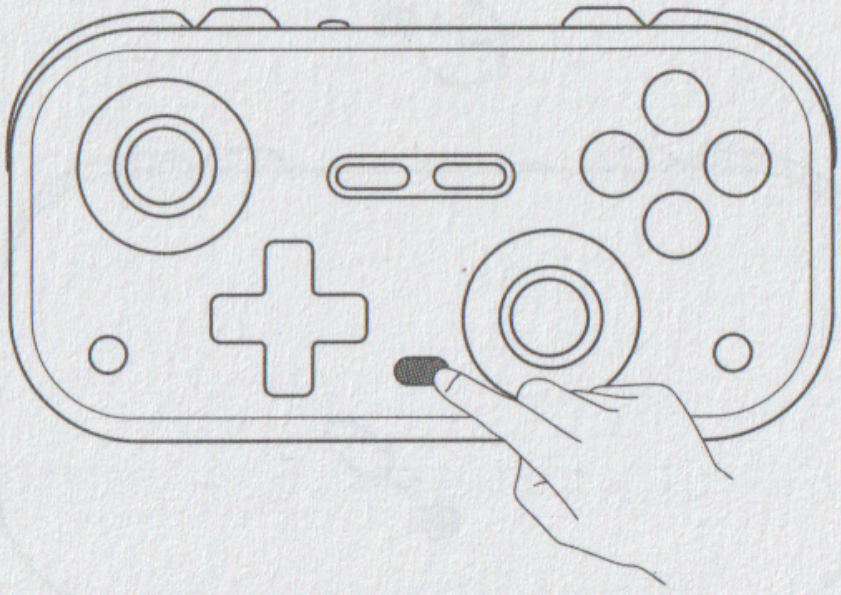

Press the [HOME] button to wake up the controller. After waking up, it will automatically reconnect to the last connected device (support waking up the Switch).

Controller Function Settings - Turbo Function Settings

Manual Turbo Mode

Press the [Turbo] and any action buttons to activate manual turbo.

Auto Turbo Mode

Repeat the operation for the second time to switch manual turbo mode to auto turbo mode.

Clean Turbo Function

Repeat the operation for the third time or hold the [Turbo] button for 5 seconds to clean the turbo function.

Please note: Holding the Turbo button for 5 seconds will clean both the Turbo and Macro functions simultaneously.

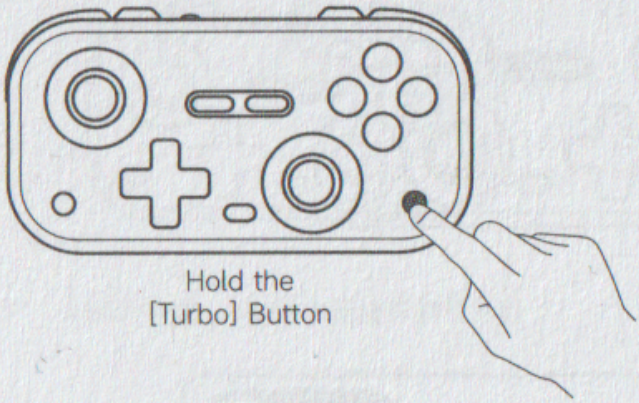

Hold the [Turbo] Button

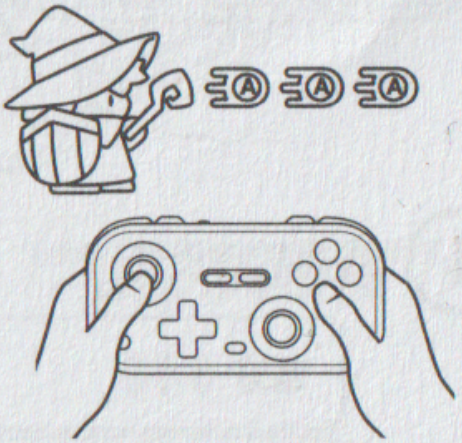

Set Turbo function for buttons to automatically combo.

Turbo Rate Settings

Increase: Hold the [Turbo] and push the [Right Joystick] to the right.

Decrease: Hold the [Turbo] and push the [Right Joystick] to the left.

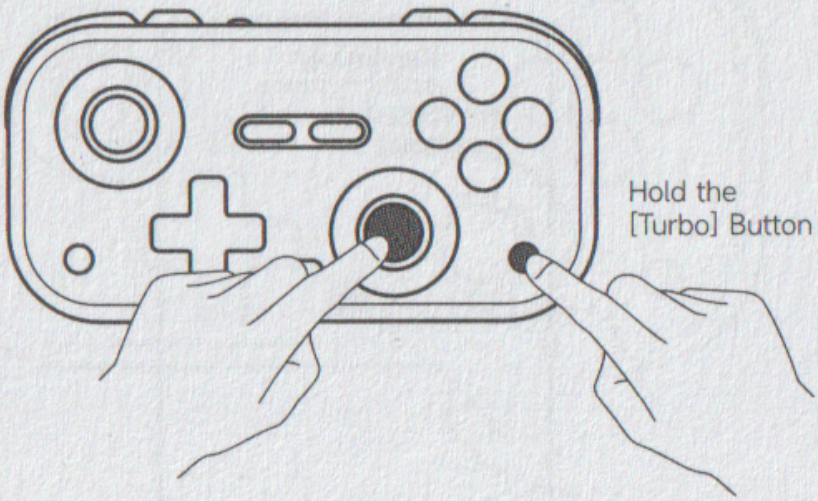

Hold the [Turbo] Button

Level 1
5/s

Level 2
12/s (default)

Level 3
20/s

Battery Power Display

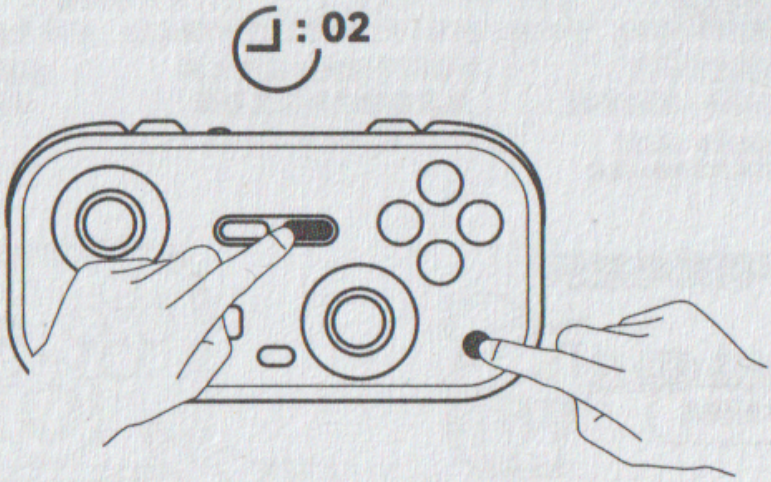

Press and hold [Turbo]+[START] buttons for 2 seconds to check the current battery level.

Battery Indicator Light

Below 25%	26%-50%	51%-75%	76%-100%

Rumble Adjustment

Increase: Hold the [Turbo] button and push the [Right Joystick] up.
Decrease: Hold the [Turbo] button and push the [Right Joystick] down.

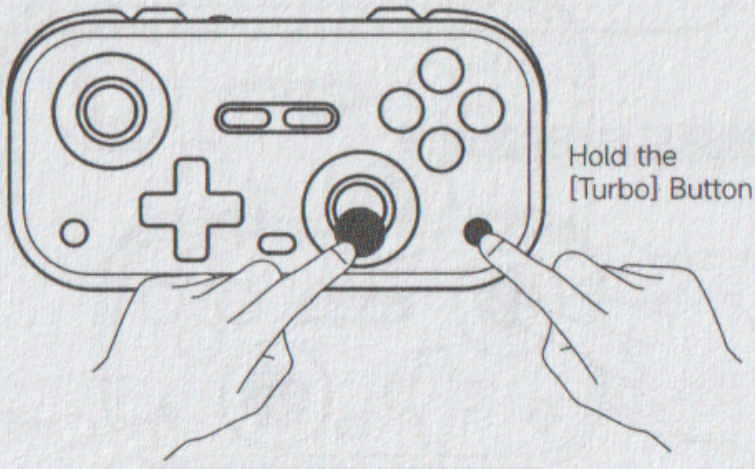

Level 1	Level 2	Level 3
0%	50%	100%

D-Pad 4-Way/8-Way Switch Settings

Hold the [Select] button and press right on the [D-pad] for 2 seconds to switch.
The controller will rumble to confirm success.

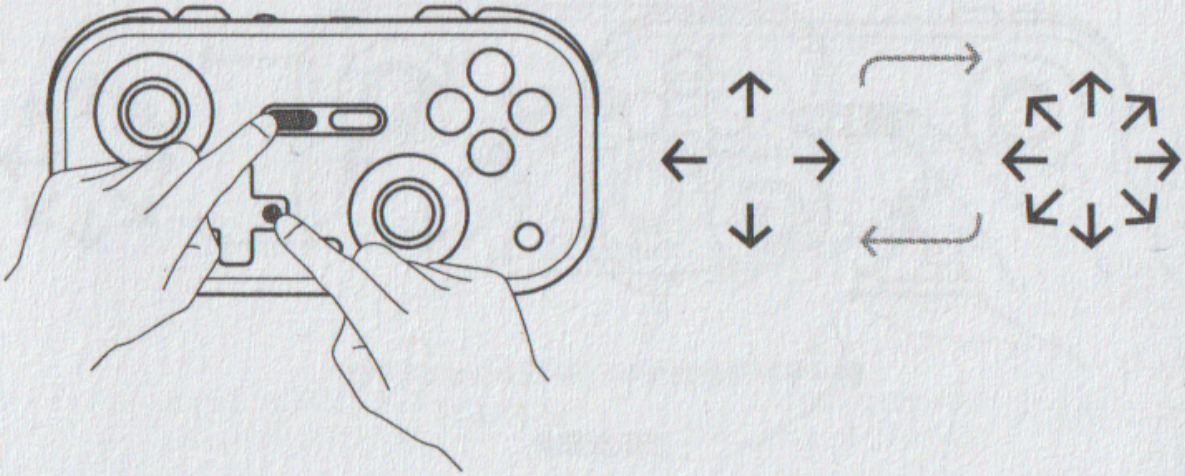

ABXY Layout Switch

Hold the [Select] and [Turbo] buttons for 2 seconds to switch.
The controller will rumble to confirm success.

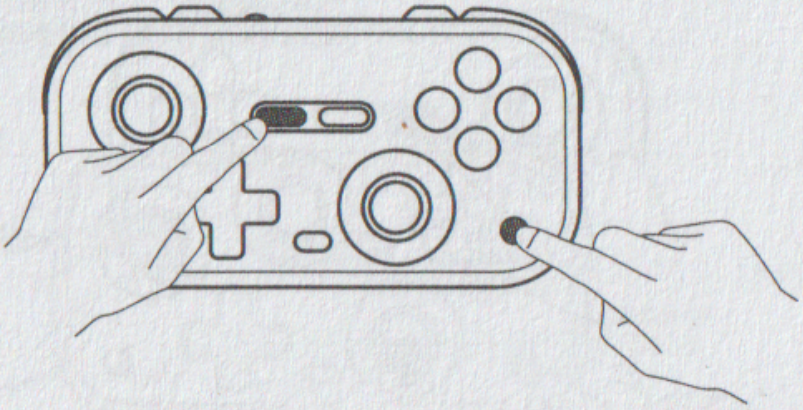

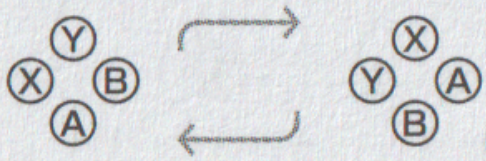

Xbox Layout Switch Layout

Switch - Wired Connection

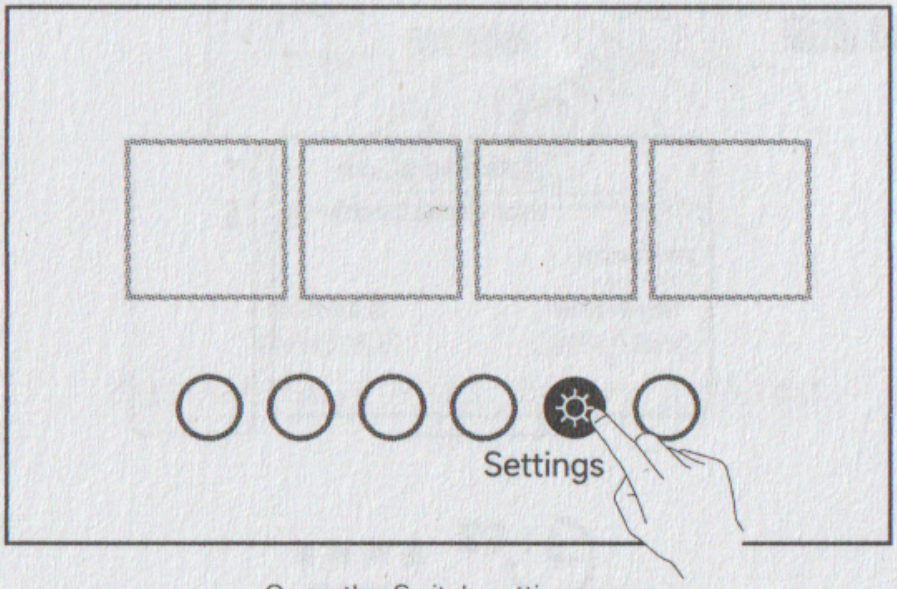

Open the Switch settings page

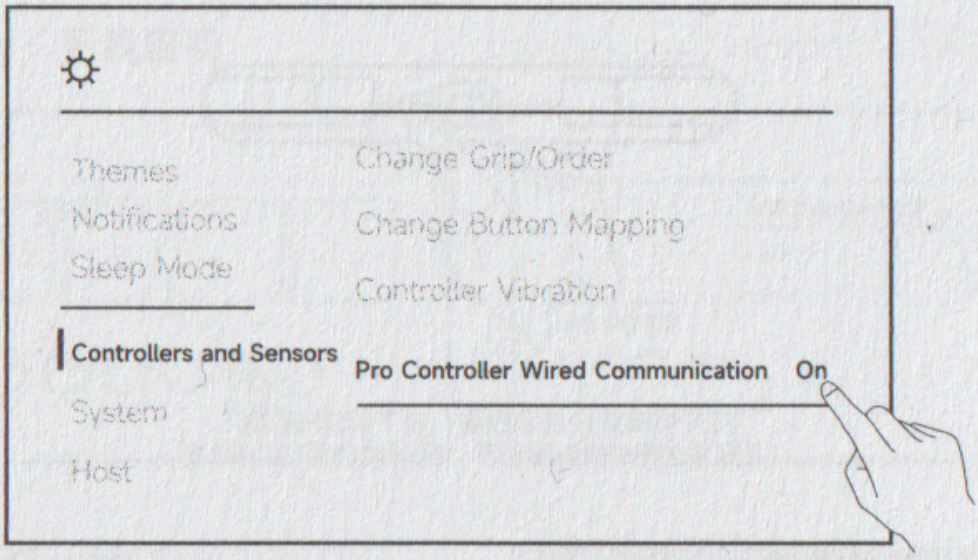

Select [Controllers and Sensors], and turn on the [Pro Controller Wired Communicarion].

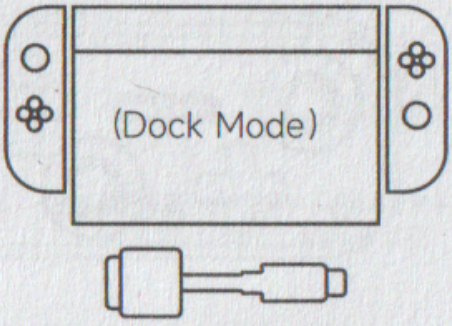

Use the charging cable to connect the dock and the controller.

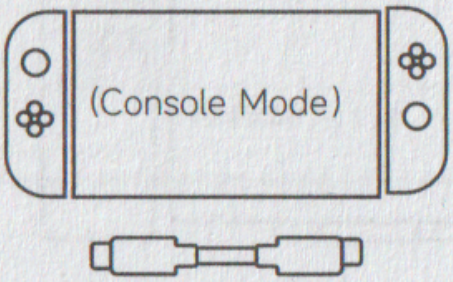

Use a self-prepared Type-C to Type-C cable to connect the dock and the controller.

3

DualShock 4 Emulation Mode(For mobile phones only)

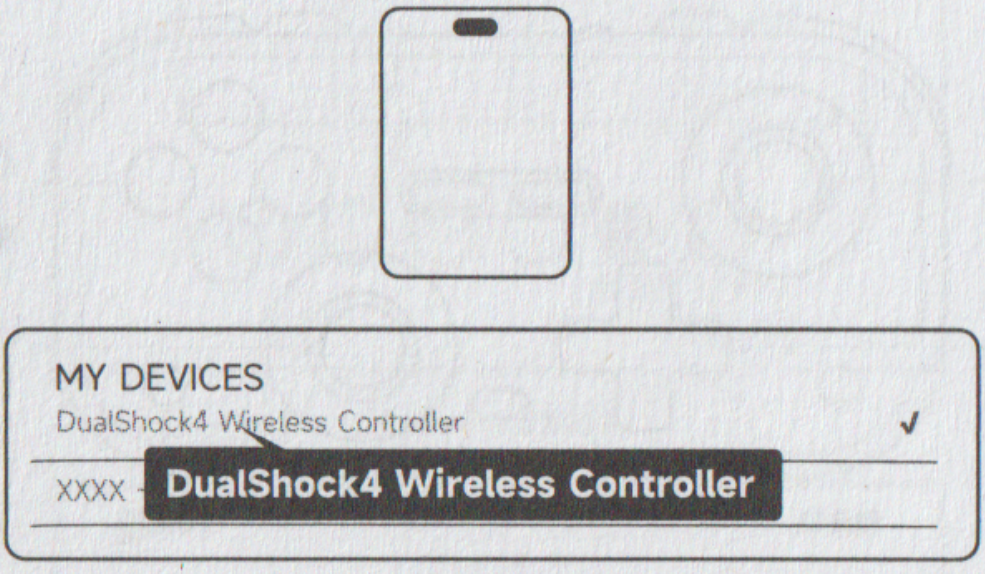



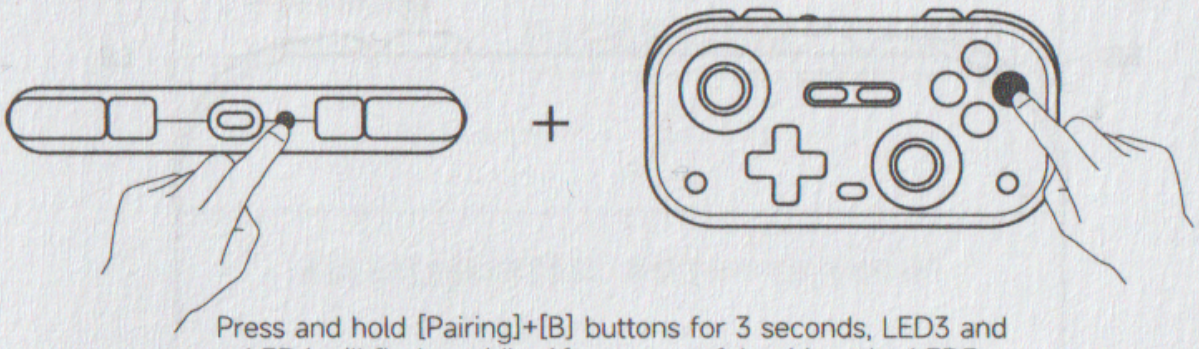

Press and hold [Pairing]+[B] buttons for 3 seconds, LED3 and LED4 will flash rapidly. After successful pairing, the LED3 and LED4 will stay lit.

4

Android - Wireless Connection

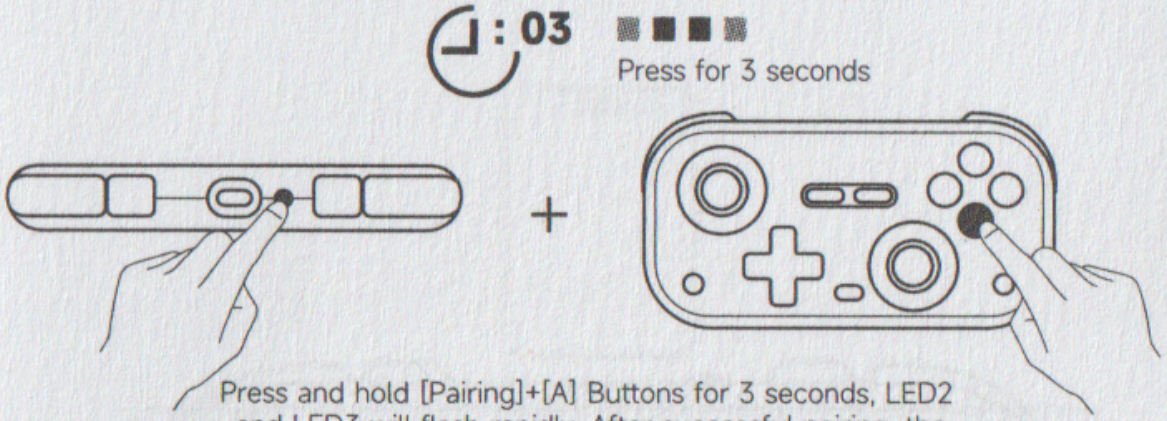

Press and hold [Pairing]+[A] Buttons for 3 seconds, LED2 and LED3 will flash rapidly. After successful pairing, the LED2, LED3 will stay lit.

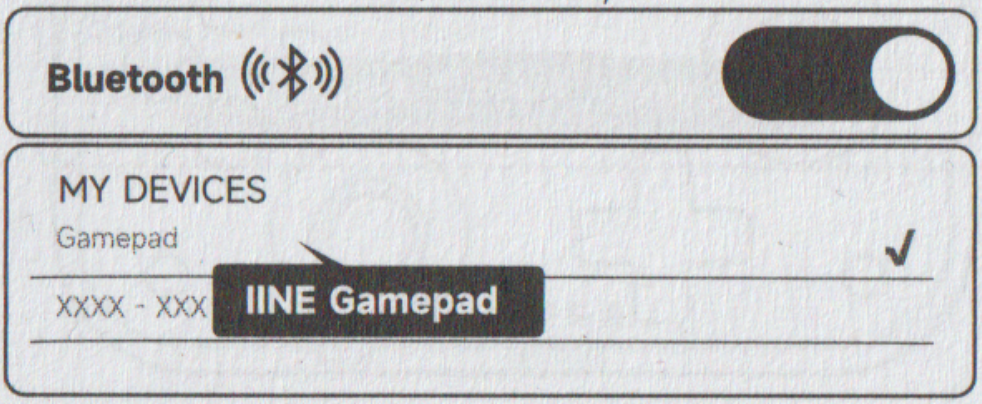

iOS - Wireless Connection

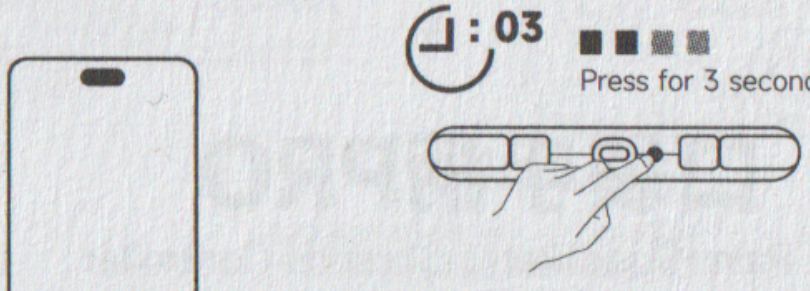

Press and hold the [Pairing] Button for 3 seconds from the bluetooth settings on the phone, LED1,LED2 will flash. After successful pairing, the LED1, LED2 will stay lit.

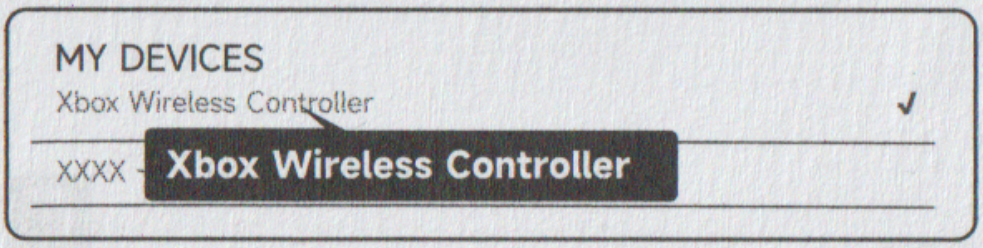

Note: For playing emulator games on Android, it is recommended to use the iOS pairing method for connection.

Joystick and Trigger Calibration

In power-off state, press [Home]+[Screenshot] Buttons to enter calibration mode (LED1 flashes slowly). Then press [A] button to start calibration. LED2 will flash slowly. Rotate the joystick to its maximum circle 3 times. After completion, press [A] button to exit and finish the calibration.

Controller Charging Indicators

SLEEP MODE

Charging Status
LED1-LED4 flash slowly

Full Charge Status
LED1-LED4 stay lit.

Connection Mode

Charging Status
The platform-specific LED will flash.

Full Charge Status
The platform-specific LED will stay lit.

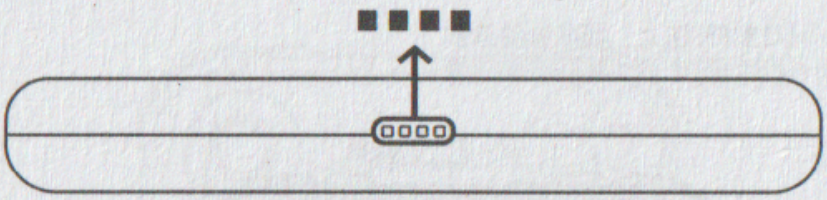

Dead Zone Adjustment

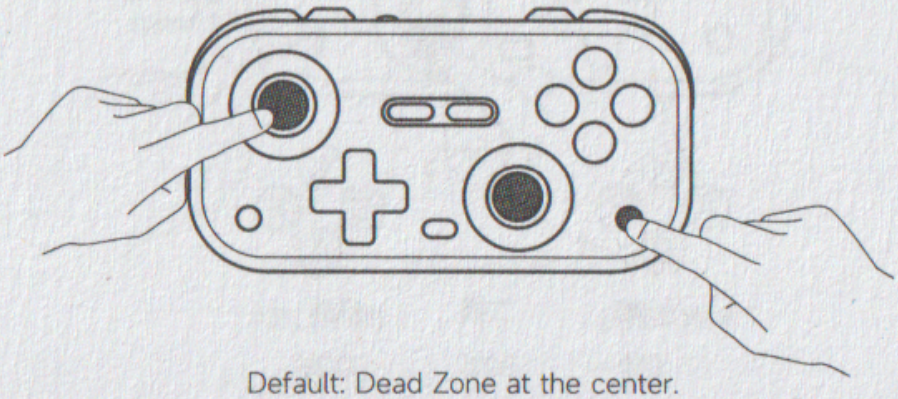

Default: Dead Zone at the center.
Switch to Zero Dead Zone: Hold [Turbo]+[L3]+[R3] buttons for 3 seconds, the controller will rumble confirms success (no memory function).

D-Pad and Left Joystick Swap

Hold the [Start] button and press the [Left Joystick] down for 2 seconds to swap. The controller will rumble to confirm success.

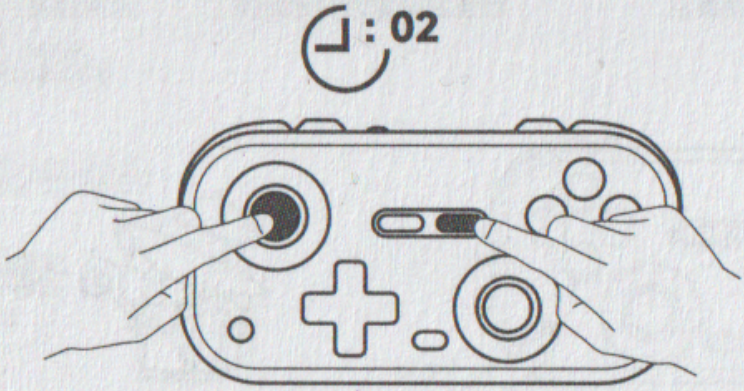

Android Touch Mode

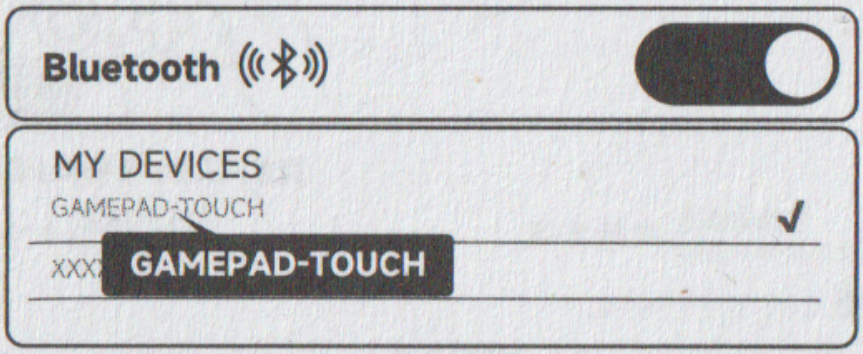

Press and hold [Pairing]+[X] buttons for 3 seconds, LED1-4 will flash rapidly. After successful pairing, the LED1-4 lights will stay lit.

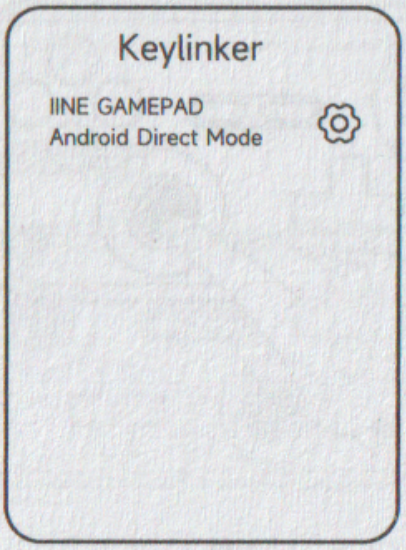

Download Keylinker app from the app store, select Android Direct Mode, and enter Touch Mode(no memory function).

Restore to Factory Settings

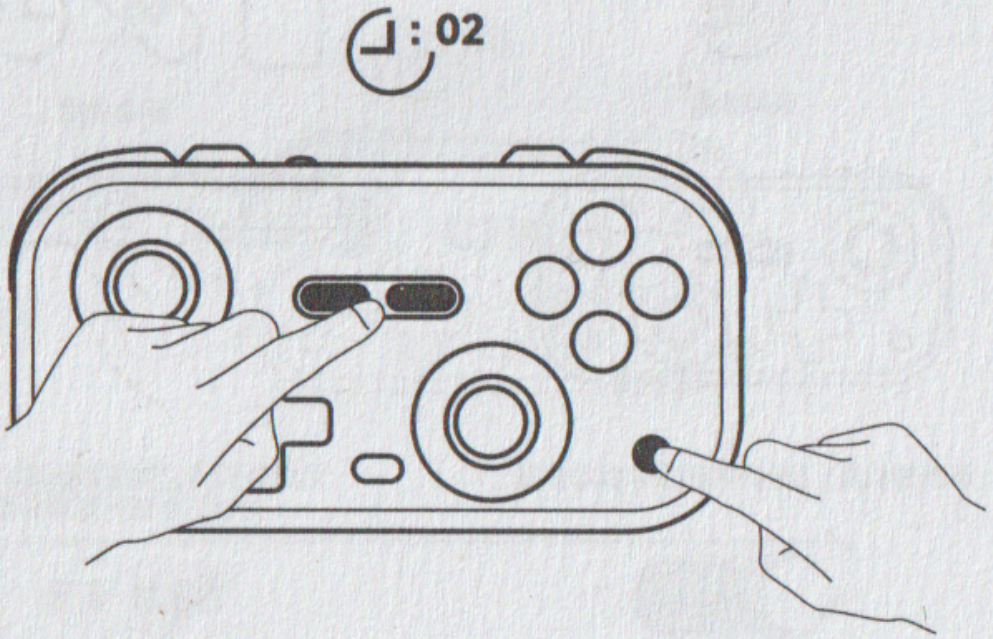

Press and hold the [Turbo]+[SELECT]+[START] buttons for 2 seconds to restore factory settings. The controller will rumble to confirm success.

Controller Reset

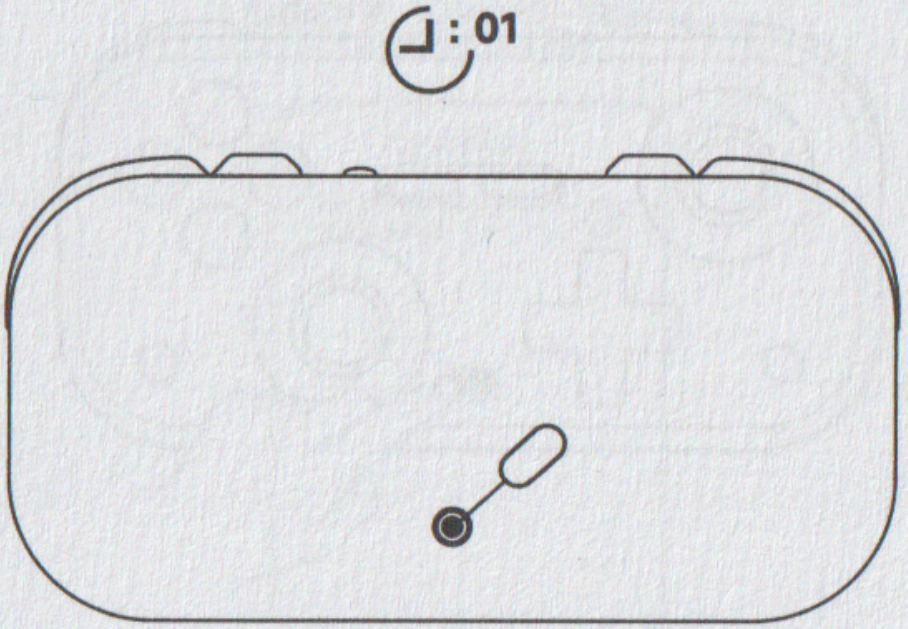

Use a pin to gently press the reset hole on the back of the controller to reset it.